

### FEATURES

EM-LED MAX is an emergency downlight featuring a highly efficient optic. It is ICEL endorsed and ENEC certified to provide full compliance with current applicable standards. With optional remote control and self-test feature the EM-LED MAX provides consistent functionality for a range of recessed ceiling applications.


- 3-hour operation
- Optional self-test
- Microprocessor controlled battery charging
- Deep discharge protection
- Open area, spot and high level optic
- Pre-wired for simple installation
- IP20



### SPECIFICATION

Power	3W
Mains Supply	230 – 240V 50/60 Hz
Operating Time	3 hours
Recharge period	24 hours
Battery Size & Type	Li-ion battery, controlled battery charging and deep discharge protection
Optic	45°   125°   155°
Luminous Output	Up to 270 lm
Max Case Temperature	65 °C
Ambient Temperature	5°C – 40°C
Insulation Class	II
Ingress Protection	IP20
LED Module Dimensions	Ø39.5 mm x 29.8 mm
Module Dimensions	L 230 mm x W 25 mm
Cut Out	Ø50 mm
Minimum Void Depth	110 mm
Finish	White
Ingress Protection	IP20
Accessories	Remote Control (self-test function)
Conformity	Certified Device, ENCE, ICEL UKCA
Warranty	5 Years

### DIMENSIONS

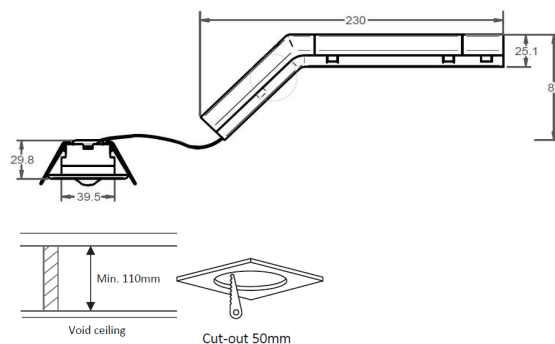

## PRODUCT ORDER CODE

EXAMPLE: EM-LED-MAX/OA/WH

PREFIX	OPTIC	FINISH
EM-LED MAX	<b>OS</b> spot optic 45°  <b>OA</b> open area optic 155°  <b>CH</b> high level optic 125°	<b>WH</b> white

## SELF-TEST

Automatically tests every week (+/- 6hrs at random). The first full-duration test is carried out automatically within the first 4 weeks after the luminaire is connected to the mains voltage. Each year the capacity of the battery is measured by simulating a power failure in addition to the functional test. Complies with EN62034.

## REMOTE CONTROL

The unit is supplied in manual test mode by default. If the self-test function is required simply use the remote control to enable it. Whether the self-test function is disabled or enabled the remote control adds extra features to this luminaire.

Press TEST to carry out a "Functional Test".

2. Press "MT ON" to initiate a "Full Duration Test".\*
3. Press "MT OFF" to interrupt "Full Duration Test".
4. Press "BAT CHK" to check battery status. \*\*
5. Press "AST ON" to enable self-test function.
6. Press "AST OFF" to disable self-test function.
7. Press "AST CHK" to check status of self-test function (enabled/disabled)

\* Note that when the "Full Duration Test" is completed the batteries require up to 8 hours to be re-charged again.

\*\* Note that battery status is recorded and updated after full duration test is completed .



Status is indicated via a bi-colour LED as follows:

Healthy:	<b>solid green</b>	Battery fault:	<b>solid red</b>
Charging:	<b>slow flashing green (1/s)</b>	Lamp fault:	<b>slow flashing red</b>
Test in progress:	<b>fast flashing green (2/s)</b>	Battery temperature:	<b>red green</b>